


## SVM-EPX – Pure epoxy resin

### Installation guide

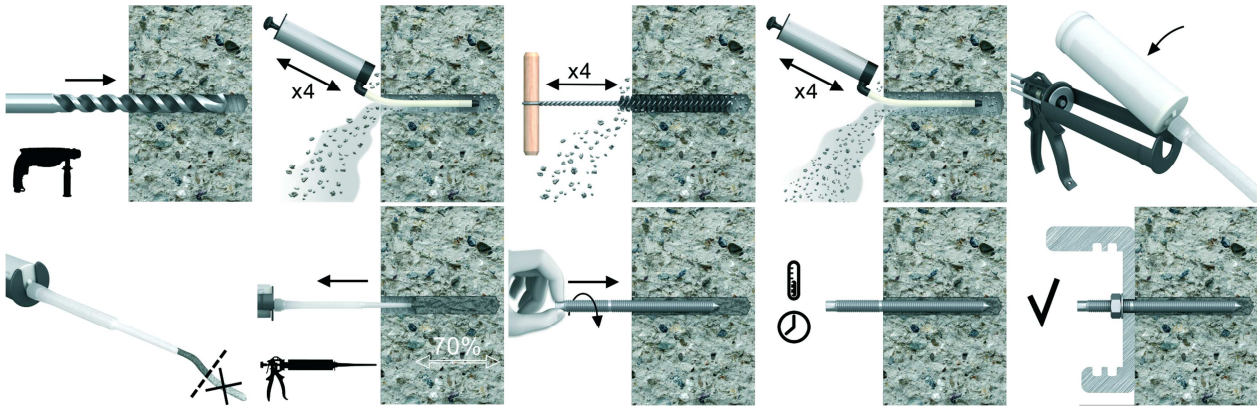

1. Drill hole to the correct diameter and depth for stud size being used.
2. Clean the hole with brush and hand pump at least four times each.
3. Insert cartridge into gun and attach nozzle.
4. Dispense to waste until an even color is obtained. Insert the mixing nozzle to the far end of the hole and inject the resin, slowly withdrawing the nozzle as the hole is filled to 70% of its depth.
5. Immediately insert the rod, slowly and with a slight twisting motion. Remove any excess resin around the hole before it sets and leave it undisturbed until the curing time elapses.
6. Attach fixture and tighten the nut to the required torque.