


## SVA-PE – Polyester capsule resin

### Installationguide

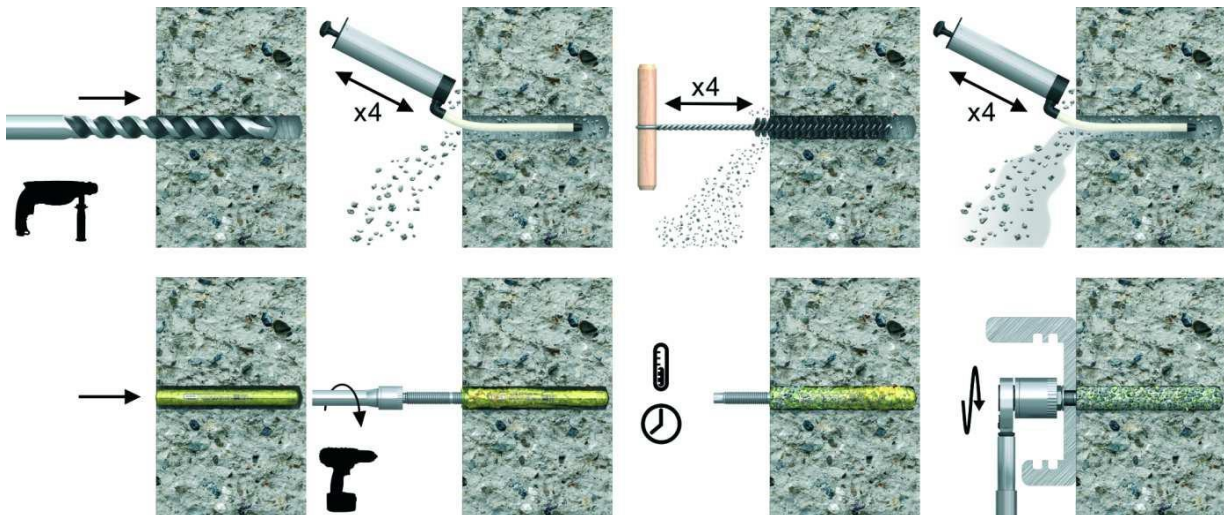

1. Drill hole to the correct diameter and depth for stud size being used.
2. Clean the hole with brush and hand pump at least four times each.
3. Insert capsule into the hole. Connect stud to drilling machine using appropriate driver system.
4. Position the stud into the glass capsule then switch on the drilling machine and drive stud into the capsule. Switch off the drilling machine as soon as the bottom of hole is reached.
5. Leave the anchor undisturbed until the curing time elapses.
6. Attach fixture and tighten the nut to the required torque.